 


FIREMAPLE

KITCHEN WITHOUT WALLS

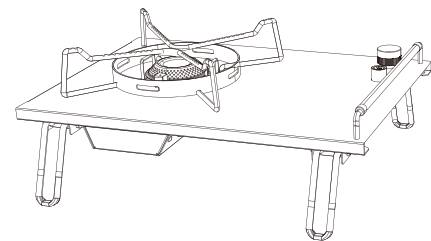

GeoHeat

Desktop Folding Remote Gas Stove

 
INSTRUCTION MANUAL

INSTRUCTION MANUAL

Specification

Product Name: GeoHeat Desktop Folding Remote Gas Stove
Material: Aluminium Alloy, Stainless steel, Copper, Rubber, Ceramics
Size: (Unfolded) 360 x290x140mm, 14.1x11.4x5.5in
(Folded) 360x250x90mm, 14.1x9.8x3.5in
Weight: 2.47kg, 5.45lb
Power: 3.2KW, 10919BTU/h (Cartridge Upright)
7.8KW, 26614BTU/h (Cartridge Invert)

Drawing

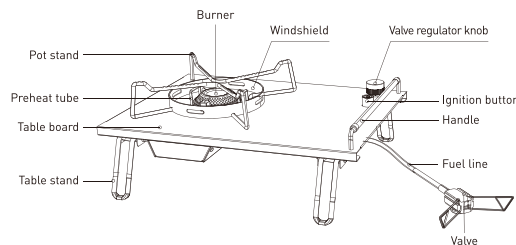

This appliance shall only be used with the butane-propane mixture cartridge [e.g.FIRE-MAPLE FMS-G2 230G] complying with EN417. It may be hazardous to attempt to fit other types of gas containers.

Read the instructions before using the appliance.

Notice: **Use Outdoors Only,**
Keep young children away from the appliance



- 1 Do NOT use the appliance in an enclosed space, such as a tent, vehicle, or home.
- 2 Do NOT disassemble or modify the stove.
- 3 Do NOT fold hose violently and keep hose away from sharp materials.
- 4 Check the stove carefully before connecting the valve to the gas cylinder. Make sure the flame regulator is closed. Do NOT use the stove if the seals between the valve and gas cylinder are damaged.
- 5 When connecting the valve to the gas cylinder, it's normal that some gas will leak. Continue to screw on until the connection is tight, then the leaking will stop. If you hear or smell gas leaking after connection, do NOT ignite. Disconnect the valve and gas cylinder immediately. Do NOT use the stove till it's checked and repaired properly.
- 6 Keep any part of your body away from the top of a burning stove, or a stove in the process of lighting. Keep any combustibles at least 1.5 meters (3.28 feet) away from sides of a burning stove, or a stove in the process of lighting.
- 7 Do NOT move a burning or hot stove. Cool for at least 5 minutes after cooking is done, then disconnect the valve and cylinder.
- 8 Do NOT let children get too close to a burning stove. Juveniles can use the stove under supervision of adults only.

Notice:

1. Inverting gas cartridge is necessary when temperature is below -15°C.
2. Do NOT invert gas cartridge at beginning of ignition. Only after the flame turns stable then you may do so.
3. After gas cartridge has been inverted, flame may become a bit yellow due to increased pressure.

3-Year Warranty

There is a 3-year Warranty for all Fire-Maple stoves.

3-year warranty covers all parts of your Fire Maple product and applies to any manufacturing defects or failures.

Warranty does NOT cover product that is stolen, lost, mishandled, or otherwise damaged by improper use.

For details, please check guaranty information
www.firemaplegear.com

 
 
 


How To Use

1. Open the Stove stand and secure the pot stand.
2. Check the stove carefully. Make sure the flame adjuster is closed
3. Connect the gas cartridge to the stove
4. Turn Valve regulator knob anticlockwise until gas begins to flow. Then press the igniter button to ignite the gas..
5. A yellow flame maybe seen after lighting, and the flame may not bestable. The flame will turn blue and be stable after several seconds.then the stove is ready to use.(If high firepower is required, please burn it upright for more than 5 minutes and then the gas cartridge can be used inverted)
6. After cooking is done, close flame regulator. Cool for at least 5minutes then disconnect the stove and gas cartridge.



GeoHeat Desktop Folding Remote Gas Stove

· How To Use

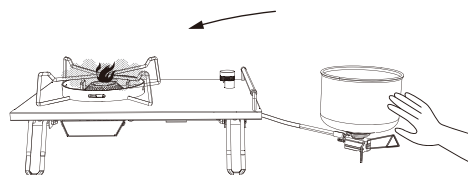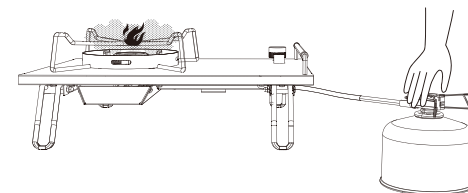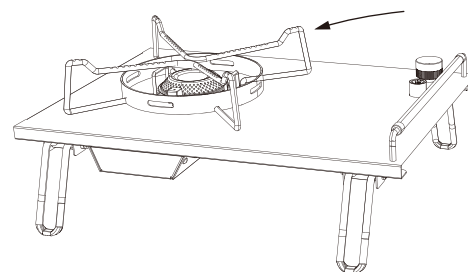


Instructions for using the gas cartridge upside down

  Before burning the gas cartridge upside down, please burn it upright for more than 5 minutes to allow the preheating tube to fully preheat

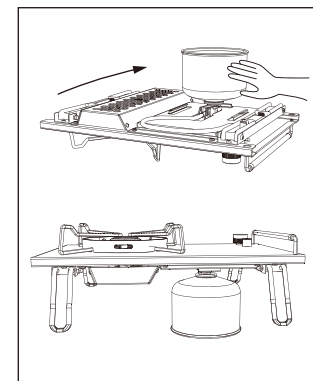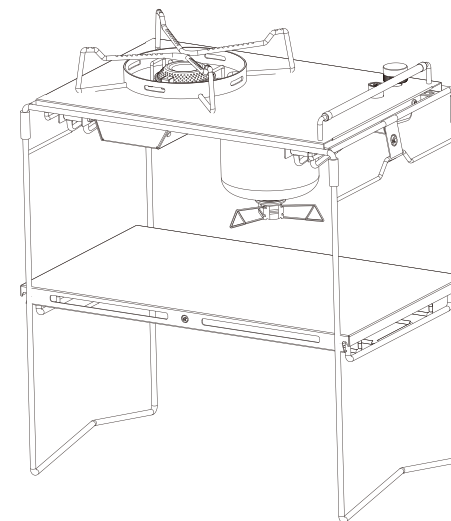


OR

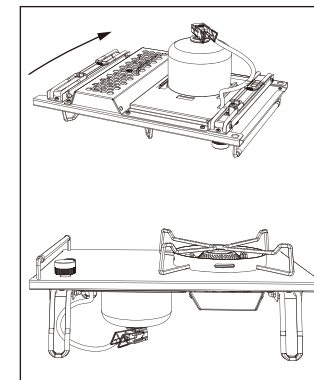 


How to use the gas cartridge inverted stabilizer

For G2 mountain air cartridges, it is recommended to use the valve body air cartridge inverted stabilizer

 
1. Upright gas cartridge, screw in valve
2. Unfold the steel wire feet on both sides of the inverted stabilizer of the air cartridge
3. After five minutes of burning with the stove upright, turn the gas cartridge upside down.

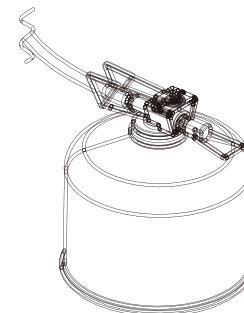

①

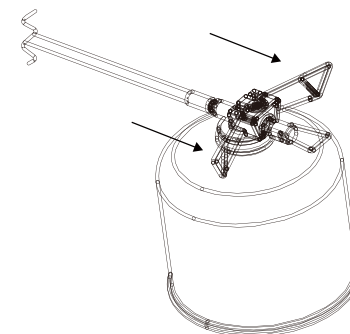 

②

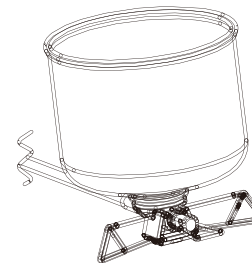 

③